



GSP
Committed to Win. Together.

EWANAPI DMS Integration in XENTRY Operation Time and Damage Code


GSP/ORE
2022
Valid until revoked

Mercedes-Benz
Das Beste oder nichts.



EWANAPI DMS integration XOT:


Access to the XENTRY Operation Time application via the Dealer Management System.

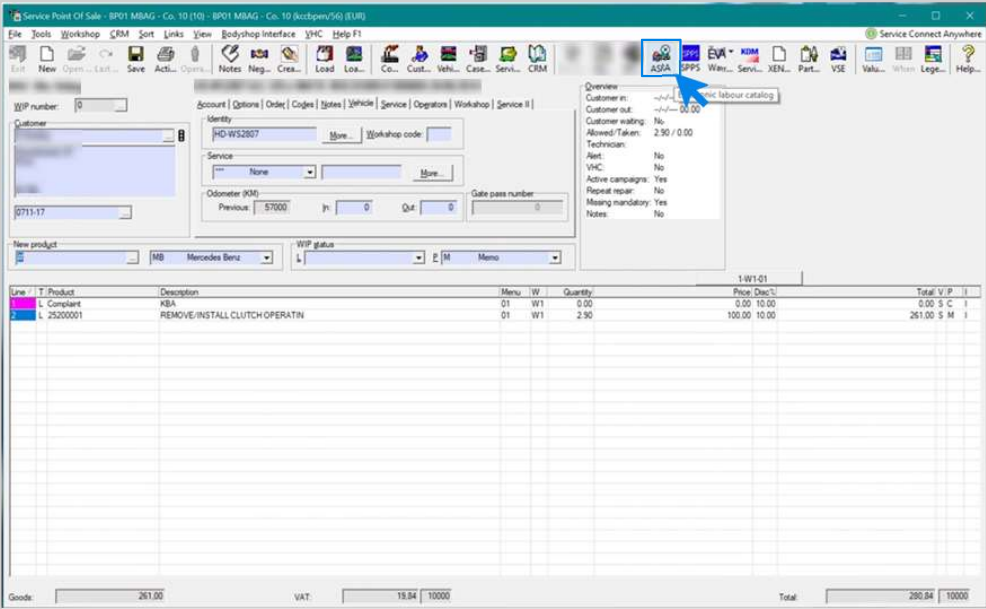

Operation items are added to the Dealer Management System (DMS) via the XENTRY Operation Time (XOT) application. To be forwarded to XOT, click on the ASRA button.

EWANAPI DMS Integration XOT:

Search for and transfer the operation item to the operation item list.

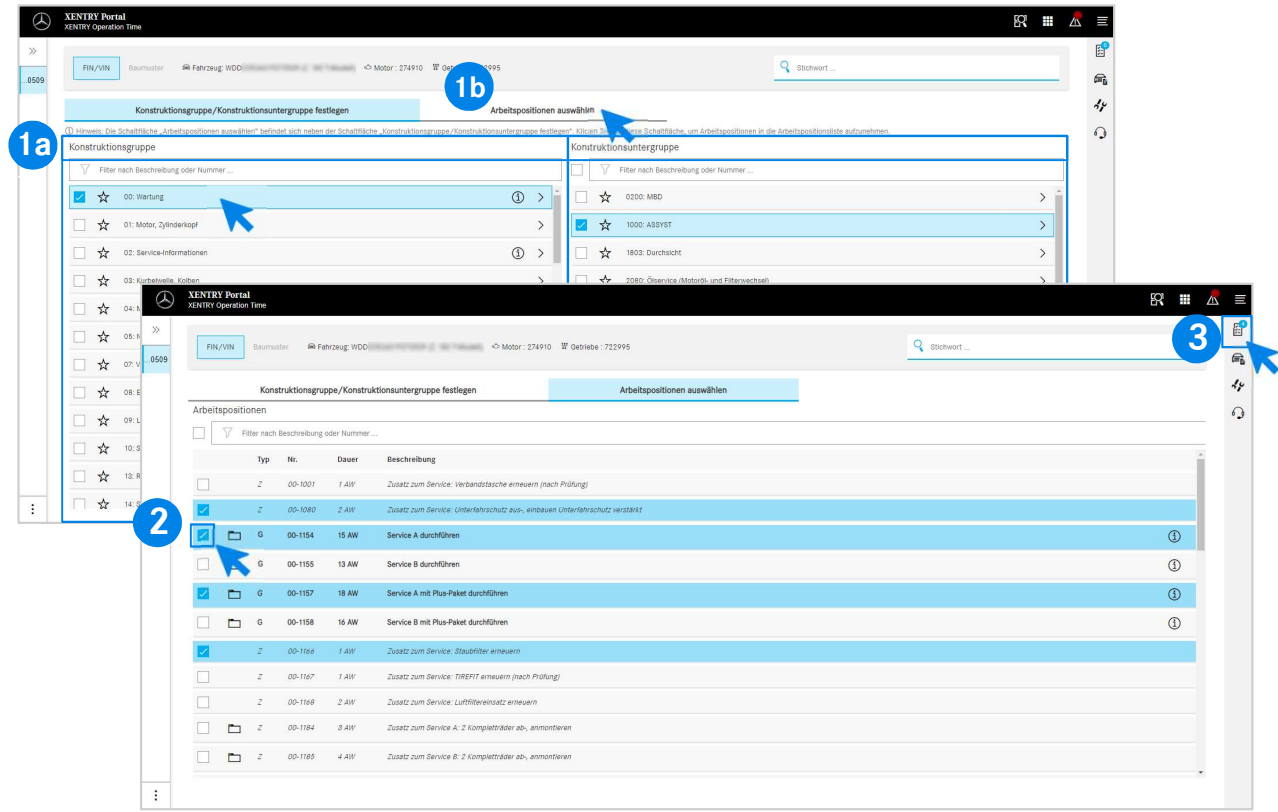

- 1 Select the desired design group and design subgroup (1a). To go to the operation items in the next step, click Select operation items (1b).
- 2 Add one or more operation items to the operation item list.
- 3 To go to the operation item list, click on the operation item list button.

EWANAPI DMS Integration XOT:

Checking and transferring the operation item to the Dealer Management System.

The screenshot shows the 'Arbeitspositionsliste' (Work Item List) in the XENTRY Portal. The table contains the following data:

Nr.	Rechnungskennzeichen	Dauer	Beschreibung
00-1080	R-kz ...	2 AW	Zusatz zum Service: Unterfahrschutz aus-, einbauen Unterfahrschutz verstärkt
00-1154	R-kz ...	15 AW	Service A durchführen
00-1157	R-kz ...	18 AW	Service A mit Plus-Paket durchführen
00-1166	R-kz ...	1 AW	Zusatz zum Service: Staubfilter erneuern

The total duration is 36 AW. The 'In DMS speichern' button is highlighted with a blue box and a blue arrow. The checkbox for the second row is also highlighted with a blue box and a blue arrow. The 'Auftragsnummer 123456' field is highlighted with a blue box.

In the operation item list, you will find a clear list of the operation items you have selected, including the order number.

- 1 Select one, several or all of the operation items from the operation item list that you want to transfer to the Dealer Management System.
- 2 Then click on the Save to DMS button to complete the transfer.

You are automatically returned to the Dealer Management System. There you will see a list of the selected operation items and you can continue to edit the order.

EWANAPI DMS Integration XOT:

Access to the XENTRY Operation Time application via the Dealer Management System with a model designation.

Baumuster Übersicht

Serien	Fahrzeugart	Familie	Typkennzahl	Typ-Baumuster	Motor-Baumuster	Verkaufsbezeichnung	Kurzbeschreibung/Code Information
E-Klasse 213	Personenwagen	74 213 E-Klasse Limousine	11 E 200 d (654,916)	213012	654916	E 200 d Limousine	
E-Klasse 213	Personenwagen	74 213 E-Klasse Limousine	12 E 200 d (654,920)	213013	654920	E 200 d	654920
E-Klasse 213	Personenwagen	74 213 E-Klasse Limousine	13 E 220 d (D20)	213004	654820	E 220 d	654920
E-Klasse 213	Personenwagen	74 213 E-Klasse Limousine	13 E 220 d (D20)	213004	654920	E 220 d	654920
E-Klasse 213	Personenwagen	74 213 E-Klasse Limousine	14 E 220 d (L)	213104	654920	E 220 d L	M 654

Auswählen Abbrechen

- 1 If you enter XOT via a [model designation](#), a pop-up window with information about the vehicles appears. You can [narrow down the search results using the filter function](#).
- 2 Select the desired entry from the list by clicking it and then clicking [Select](#) to be forwarded to the [operation items](#).

EWANAPI DMS Integration XOT - DC:

Selection of a damage code in the Damage Code application via XOT.


	Nr.	Rechnungskennzeichen	Dauer	Beschreibung
<input checked="" type="checkbox"/>	40-2410	R-42 ...	4 AW	Reifen erneuern (Kompletttrad abmontiert)
<input type="checkbox"/>	40-2420	R-42 ...	7 AW	2 Reifen erneuern (Komplettträger abmontiert)
<input type="checkbox"/>	40-2440	R-42 ...	12 AW	4 Reifen erneuern (Komplettträger abmontiert)
<input type="checkbox"/>	40-2710	R-42 ...	4 AW	Scheibenrad erneuern (Kompletttrad abmontiert)
<input type="checkbox"/>	40-2720	R-42 ...	7 AW	2 Scheibenräder erneuern (Komplettträger abmontiert)
<input type="checkbox"/>	40-4403	R-42 ...	2 AW	Spur an der Hinterachse einstellen (bei Fahrwerkvermessung)
<input type="checkbox"/>	40-2740	R-42 ...	12 AW	4 Scheibenräder erneuern (Komplettträger abmontiert)

1 The **Damage Code** application can be accessed via the **XENTRY Operation Time** operation item list.

To access the **damage codes** for an operation item, select the desired operation item (1a) and click on the damage code symbol (1b). This takes you to the **Damage Code** application.

EWANAPI DMS Integration XOT - DC:


Search and select a damage code in the Damage Code application.

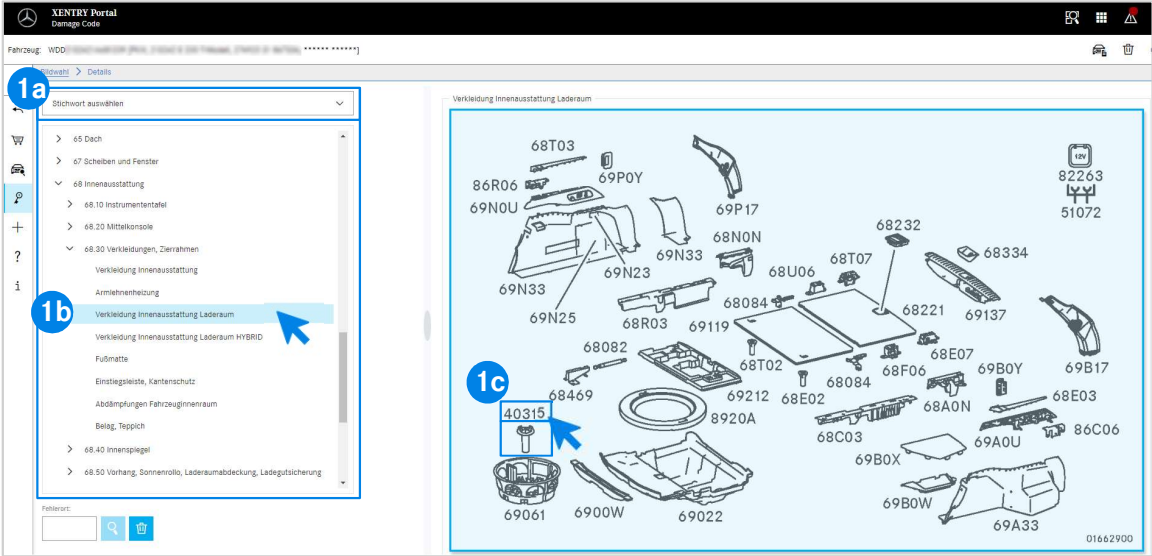

- 1 First, define the operation item more precisely either via the keyword selection (1a) or using the design groups and subgroups listed below (1b). On the pop-up picture board next to the right, you can then click to select the corresponding part number (1c).

EWANAPI DMS Integration XOT - DC:


Selection of a damage code in the Damage Code application and transfer to XOT.

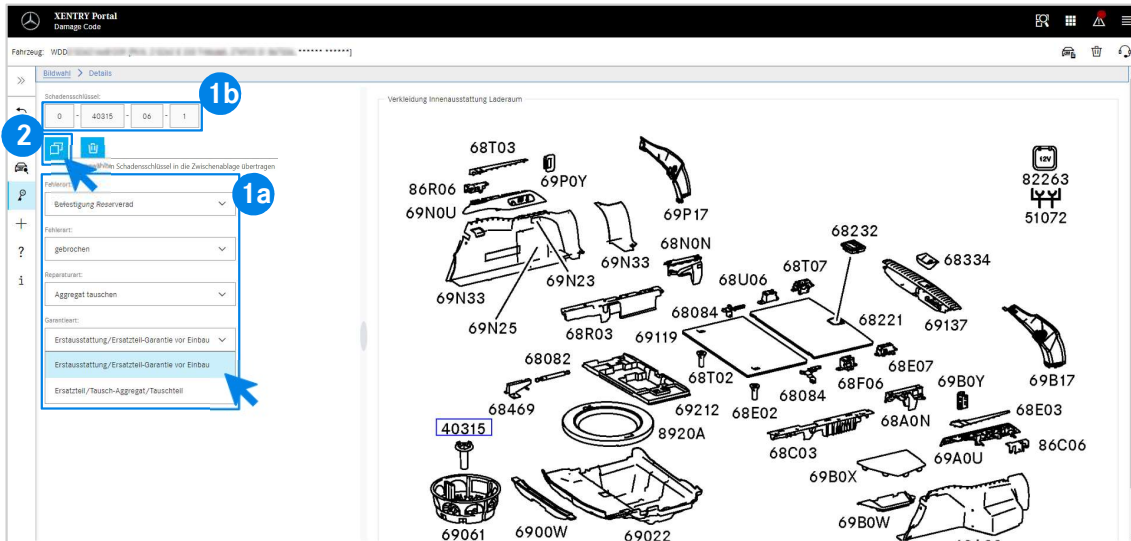

- 1 Select the fault location, fault type, repair and warranty type (1a) via the respective drop-down menu to display the damage code (1b).
- 2 Use the Back button to simply jump back to the operation item list in the XENTRY Operation Time application. The damage code is applied automatically. This can now be transferred to the DMS together with the operation items (see slide 4).

EWANAPI DMS integration DC:


Access to the **Damage Code** application via the **Dealer Management System**.

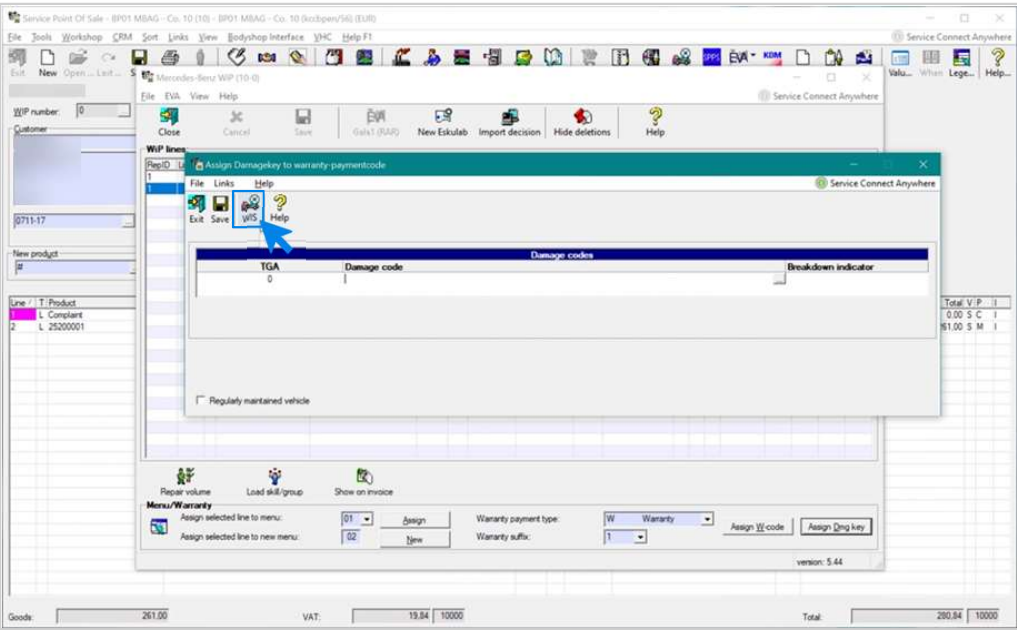

Damage codes are added to the Dealer Management System (DMS) via the **Damage Code** application. To be redirected to the **Damage Code** application, click on the **WIS** button and log in.

EWANAPI DMS integration DC:


Search and select a damage code in the Damage Code application.

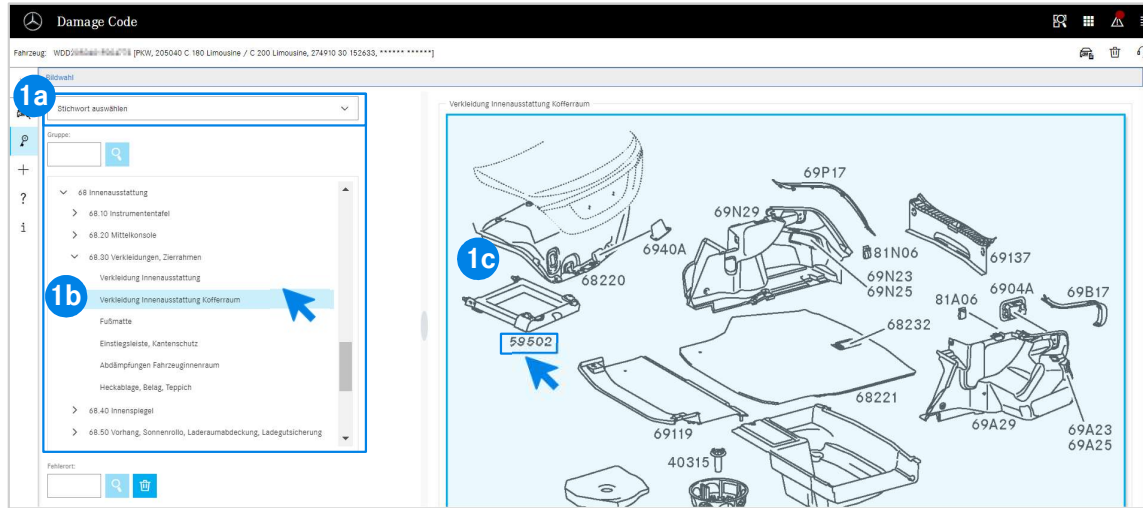

- 1 First, define the operation item more precisely either via the [keyword selection](#) (1a) or using the [design groups and subgroups](#) listed below (1b). On the pop-up [picture board](#) next to the right, you can then click to select the corresponding [part number](#) (1c).

EWANAPI DMS integration DC:

Selection of a damage code in the Damage Code application and transfer to the Dealer Management System.

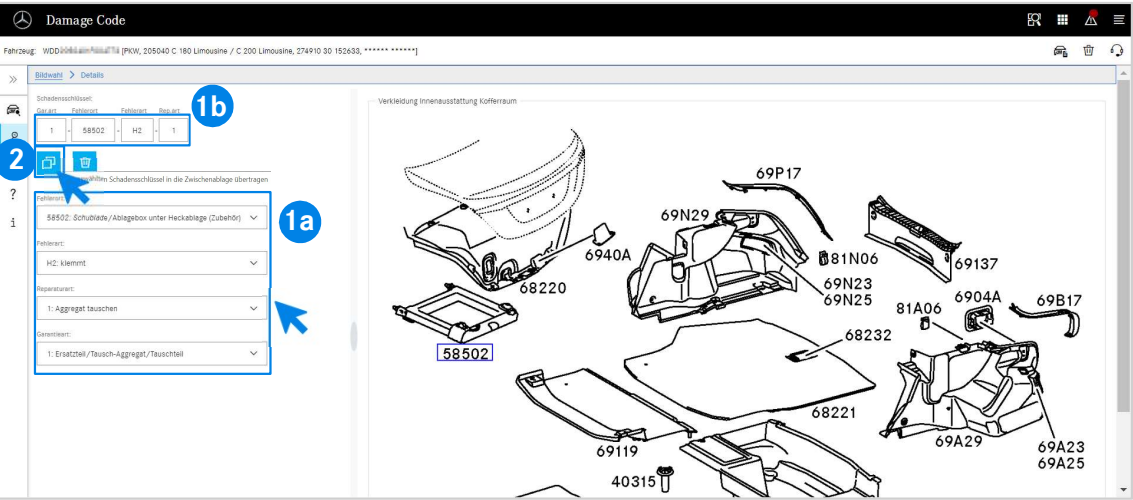

1 Select the fault location, fault type, repair and warranty type (1a) via the respective drop-down menu to display the **damage code (1b)**.

2 By clicking on the symbol for **transferring selected damage code to the clipboard**, the damage code is transferred to the Dealer Management System.

